


MEASURING MADE EASY

FRONT PANEL

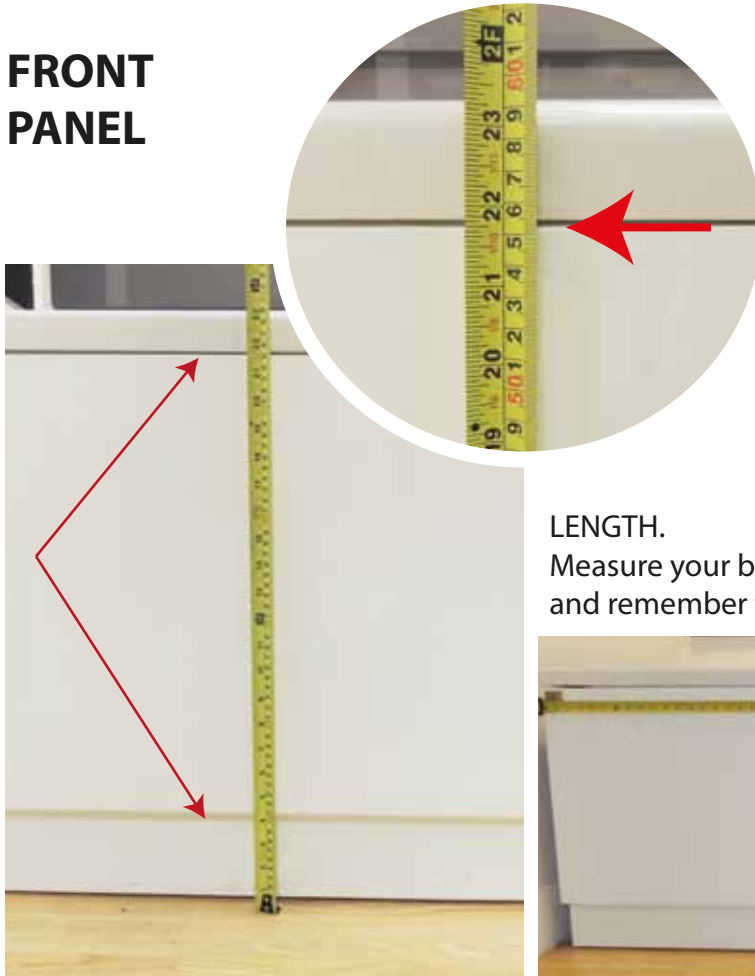

HEIGHT.

Measure from the floor to the return of your bath in the example opposite you can see the measurement is 552mm to make the panel easy to fit you must take 3-4mm off the total height so the height you would need is 548mm

NOTE: Take several measurements along the bath to make sure it is a consistent height

LENGTH.

Measure your bath from end to end as in the picture below and remember to allow the 3-4mm tolerance for that easy fit



END PANELS.

When fitting a front and end panel be sure to order the correct end panel for your bath to avoid unnecessary cutting or trimming.

The illustration below shows a typical 1700mm x 700mm bath configuration using 15 or 18mm panels,



The correct combination for the above example bath is a 1700mm main panel and a 680mm end panel.